<u> Uniden Scanner – PC Programming Mode</u>

Step 1 – Connect the USB cable to the USB Port on the	Select Knoh
Scanner and your computer (Figure 1).	SELECTION
Step 2 – Press the Menu Button on the side of the scanner (Figure 1).	Menu Button USB Port
Step 3 – Rotate the Select Knob until "Settings" is	Uniden
highlighted (Figure 2).	N F U II
Step 4 – Press the Select Knob down to select "Settings" (Figure 1).	Search for Close Call Analyze Discovery Priority Scan WX Operation Tone-Out for Display Options Settings
Step 5 – Rotate the Select Knob until "PC Programming	Uniden
Mode" is highlighted (Figure 3).	
Step 6 – Press the Select Knob down to select "PC Programming Mode".	Settings Adjust Key Beep Set Clock Upgrade Battery Options Band Defaults Auto Shutoff Replay Options PC Programming Mode Initialize Setting Figure 3
Step 7 – Press the "E-yes" key to enter PC Programming	Uniden
Mode (Figure 4).	PC Progranning Mode ? Yes="E" / No="." Figure 4
Your Scanner should now be in "PC Programming	Uniden
 Mode" (Figure 5). Notes: Your PC may ask permission to connect to the Scanner, if so, click Accept/Allow. Windows File Explorer may automatically open which can be ignored or closed. 	PC Prosrannins Node Figure 5